

Installation instructions


SERIE 7000+

CS 80066 400 RD 520 – 38147 ST BLAISE DU BUIS CEDEX / France / 003304 76 67 16 50
E-mail : algaflex@algaflex.fr; Site Internet: www.algaflex.com



EQUIPMENT REQUIRED:

Marker - Drill - Screwdriver - Neutral PH Grease
Hammer - Flat Screwdriver

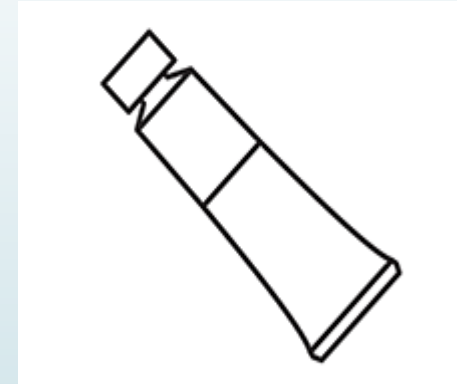




DELIVERY CONSISTS OF:


1 tube for the track

1 package

CAUTION WHEN UNPACKING:

The junction clamps to be attached to the wall are in a red bag, slipped into the rail.




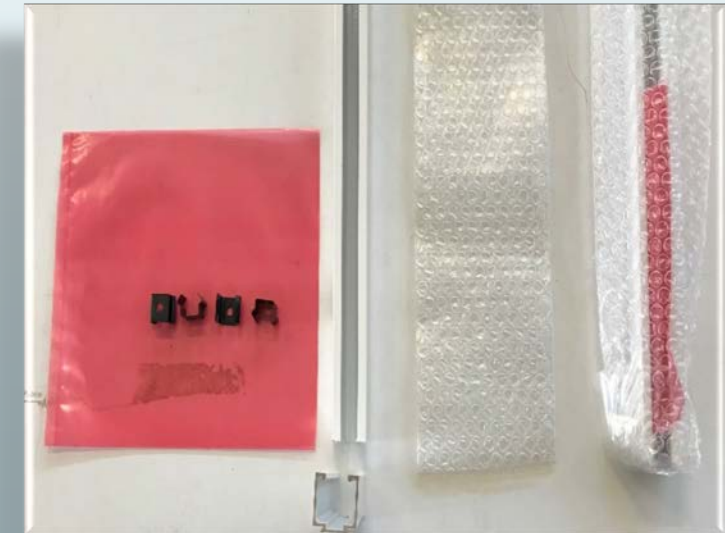


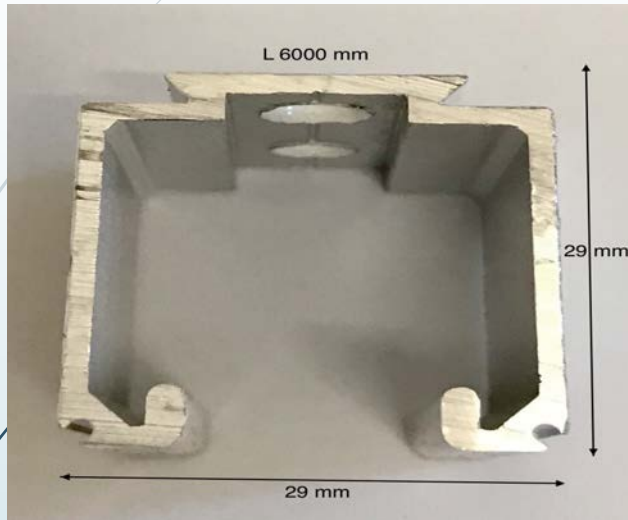

New track 2019

Dimensions

L 29 mm H 29 mm L 6000

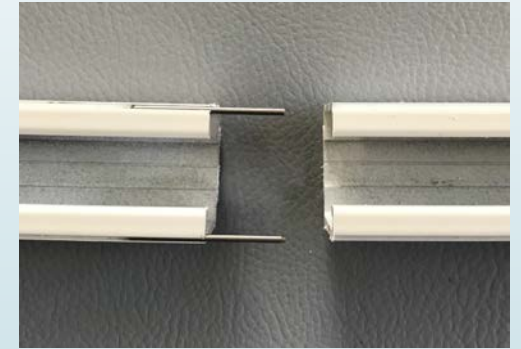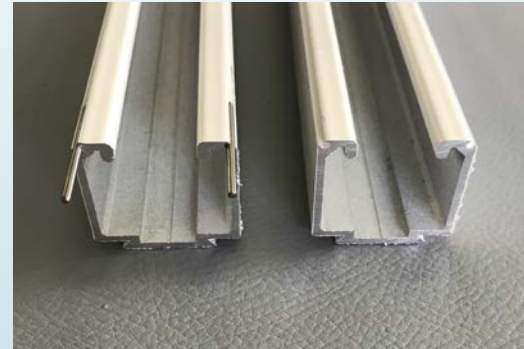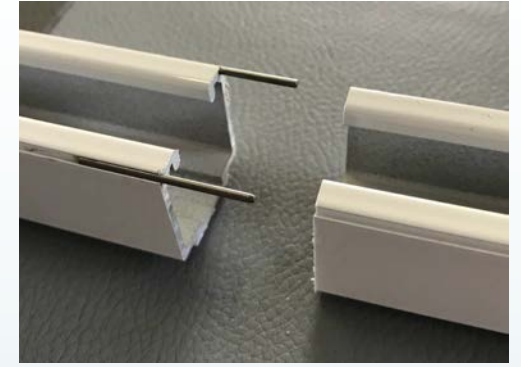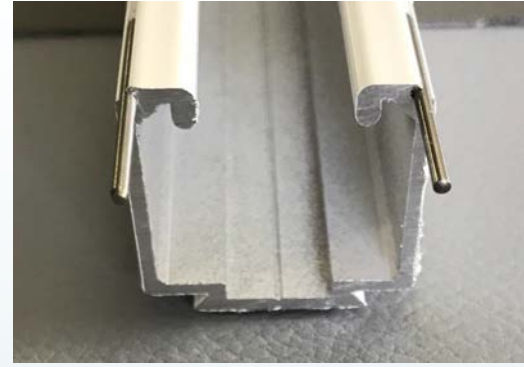

connecting pins for track \varnothing 1,5 mm L 30 mm

Step 1:

Position the track on the ceiling, then mark the holes with a marker (we recommend to make at least 3 holes).





Screw the rail with the pins to the ceiling.



Move the axes inside the track.



Position the next track in alignment with the axis track and screw it to the ceiling.



Insert a flat screwdriver into the track groove and push the pins with a hammer towards the other track



Perform the previous operation on the other side.

Step 2:

Insert the partition casters into the white track



Step 3:

Position the partition with the track



Step 4:
Fixe the track.



Step 5: To be executed only for a large partition

(partition for which 1 leaf is composed of several parts).

Assemble the partition parts together using the junction pliers (stirrups). Pliers can be tightened or pulled apart as required (count 3-4 pliers per element).



Step 6:
Fix the clamps against the wall. (3 to 4
clamps on the height).



Step 7:

Grease the clamps (if necessary). Clip the partition



Step 8 :

Attach the aluminum post to the wall on the handle side



Step 9 :

Put a little grease in the rail to ease the travel if necessary



For a 2-leaf partition:
there is no front post, there are only clamps to
attach to each wall (step 6).